


EI-683H Wi-Fi Phone

User Manual

Architecture

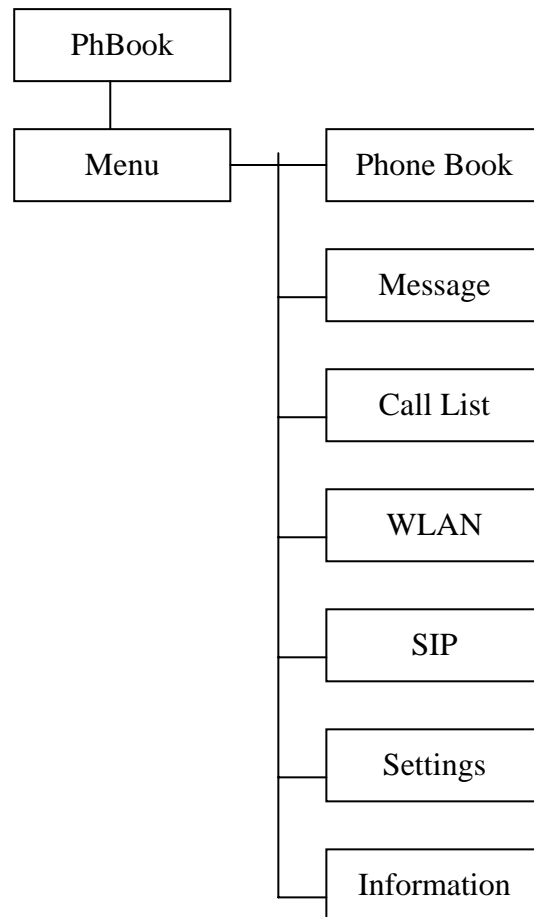

1. How to connect with Access Point

The screen shows the [Select Network] after the EI-683H phone power on.

Step: Menu -> WLAN -> View Networks -> Choose AP-> Press Options -> Connect

※ If AP enable WEP or WPA, please key in the key.



2. How to Register to IP-PBX (SIP Server)


Enter your SIP account information after you select the network.

Step1: Menu -> SIP -> SIP Wizard to create new account profile -> Press Select

Step2: Enter profile name -> Enter display name -> Enter SIP user name -> Through SIP Server (If peer to peer, please choose "Direct Call") -> Enter authorization name -> Enter password -> Enter proxy (IPPBX IP ex. 192.168.1.1:5060)-> Don't need to key in domain just press "OK" -> NAT Travers select None.

Step3: Select the profile and back to main page.

Step4: "Registered" show in LCD monitor.

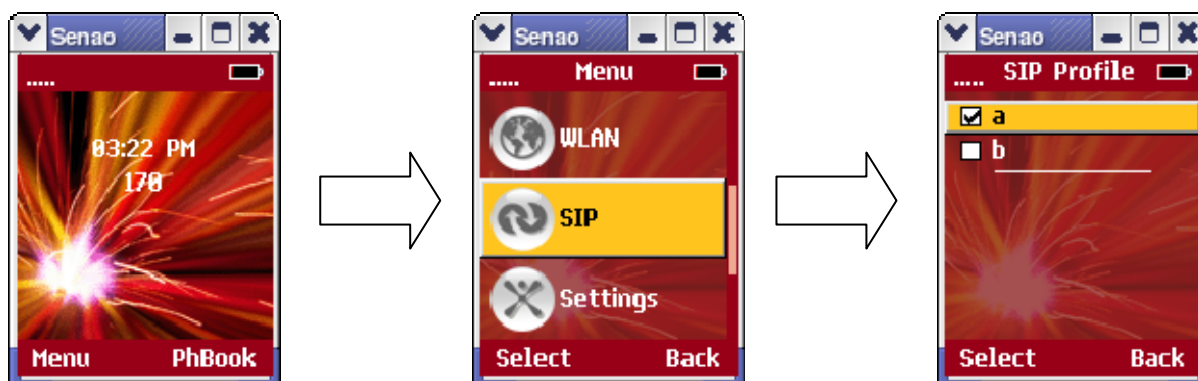

3. How to manage the Phone Book

Create the Phone book item

Step: Press “PhBook” -> Enter name to create a new contact -> Edit SIP Phone -> Edit another information (ex. Mobile...) -> back

Modify Phone book item

Step: Press “PhBook” -> select list item and press “Options” -> View Profile -> Edit -> Back

※ When press “Back” setting would be saved.

Delete the Phone book item

 
Step: Press “PhBook” -> select list item and press “Options” -> Delete



4. How to make a call

You have 3 ways to make a call.


- (1) Direct dial number and press “OK”
- (2) Though Phone book
- (3) Speed Dial .(Setting in Menu->Settings->Speed Dial)

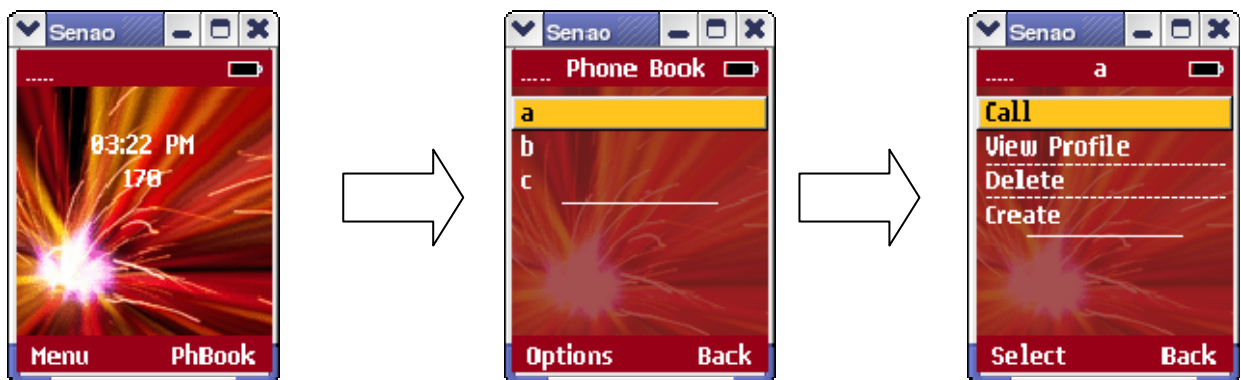

5. How to manage the call list

You can see your call history in call list. There are three kinds.

- (1) Missed Calls
- (2) Incoming Calls
- (3) Outgoing Calls

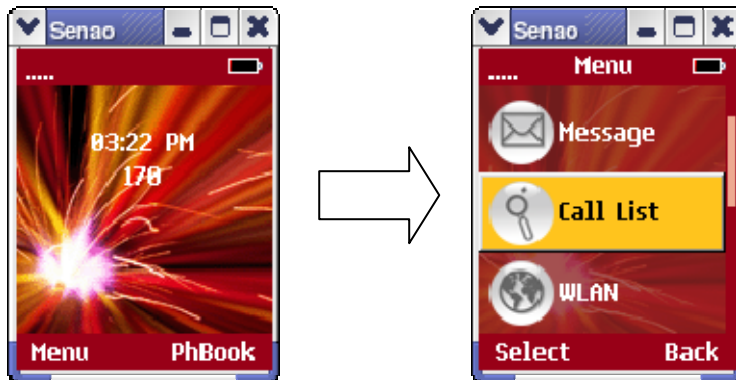

Step: Menu->Select “Call List” ->Select an item(ex. Incoming Calls) -> Options (You can make a call, Send Message, View Detail, Save to Phonebook, Delete an item and Delete all items)

6. Settings

You can set the phone features in there. There are 7 items.

- (1) Language

Support English, Tradition Chinese, Simple Chinese and Japanese



- (2) Tones

Set the Ring tones, Volume, Vibrate Mode , Keypad Tone and DTMF Tone

- (3) Time and Date

Set the Time Setting and SNTP Setting (SNTP Server)

- (4) Divert to Another (Call Forward)

Set the Divert Status: There are 4 kinds

None: disable the function


All: All calls forward.

Busy: When phone busy call forward.

Unanswered: When phone unanswered call forward.

Set the Forward to Number: Enter the call forward number.

(5) Calendar

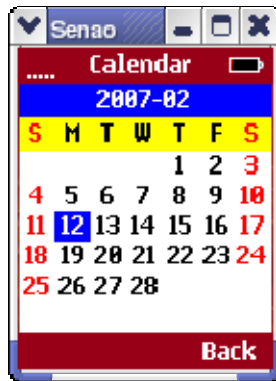

(6) Speed Dial


Set the speed dial number to key 0-9



(7) Auto Provision (Base on IP-PBX or SIP Server)

Set the Auto-provision Status: On or disable

Set the Server: FTP or TFTP

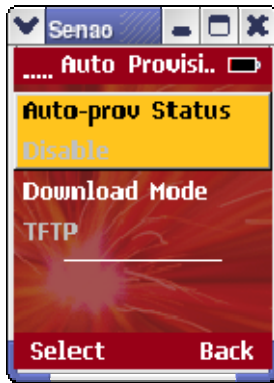


7. Information

- (1) SIP : Show the SIP register detail
- (2) Network: Show the network status.
- (3) System : Show the Firmware Version and Firmware build date.

8. Web GUI Login

When EI-683H get an IP from Access Point, it can use Web browser to config it.

 For example: <http://192.168.1.109>

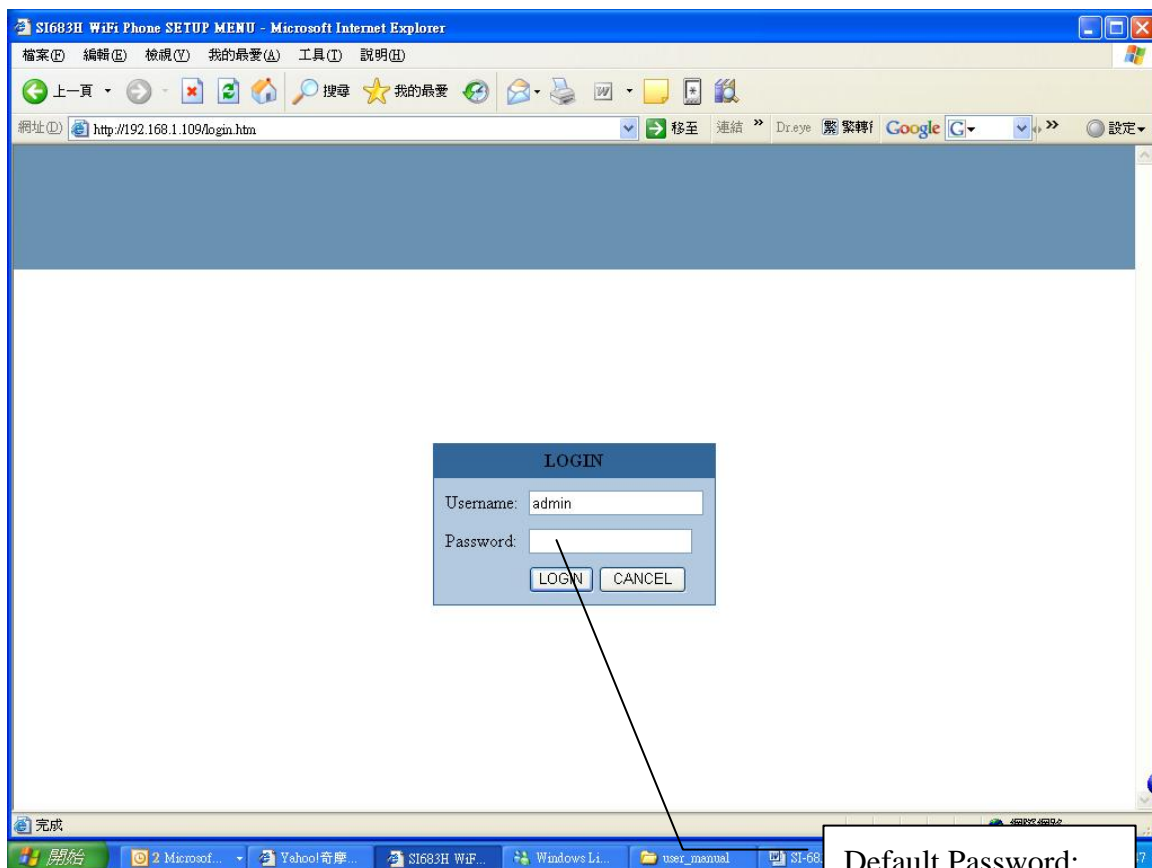

9. Web Main Menu

SI-683H WiFi Phone

Apply Home Exit

Status

WLAN		SIP	
Status	Ready	Profile Name	600
SSID	Room703-2611CB3	Display Name	600
BSSID	00:02:6F:40:EB:7D	SIP User Name	600
IP Address	192.168.1.139	Auth. Name	600
MAC Address	00:02:6F:11:22:34	Domain	N/A
DHCP Enable	Yes	Proxy Status	Enable
Subnet Mask	255.255.255.0	Proxy Server	192.168.1.1:5060
Gateway Address	192.168.1.100	NAT Status	Disable
DNS Address	192.168.1.100	NAT Server	N/A

System Information

Local Time	2007/2/15 Thu 15:13:08
Firmware Version	0.2.15 (2007/01/29)

Refresh

Help

Setting Item

Setting Content